


# TinyTrak GPS Feedthrough Switch

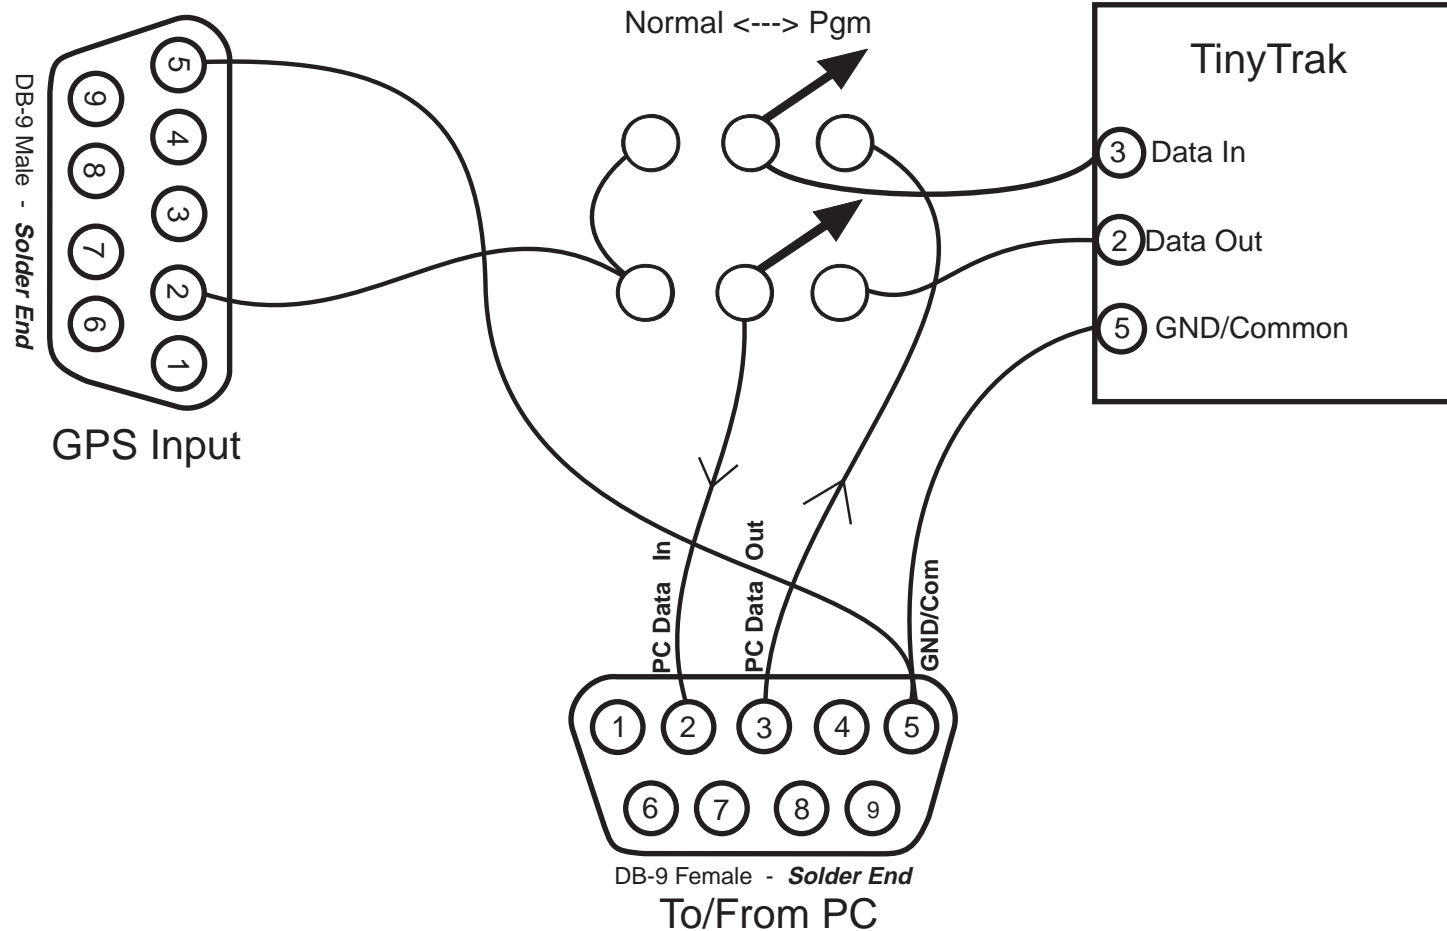

Stephen H. Smith  
wa8lmf@aol.com  
7 Oct 2001

In NORMAL mode, GPS data goes to both the TinyTrak and to PC for use with Street Atlas, etc. In PROGRAM mode, GPS is disconnected and TT is connected to PC.

TinyTrak input impedance is very high (greater than 10K) so it can be paralleled across GPS-to-PC data line with no problem.